



Horizontal Sign Assembly

10' | 15'

Part List

- 4 Cast Double Tube Sign Fittings
- 2 Cast Bally Corner Fittings
- 2 9'5" x 1-1/3/4" Vertical Bars
- 1 9'5" x 1-3/4" Top Bar (10' wide Sign) OR
4'5" x 1-3/4" Top Bar (15' wide Sign)

1. Install 2 **Cast Double Tube Sign Fittings** onto each front tent leg BEFORE assembling tent frame. Install just above the half way mark on each leg. Space the fittings about 4"-6" apart and tighten wing nuts to secure to tent leg. (Be sure to install the fittings in the same spot on each leg.)
2. After assembling the tent frame and cover, insert a **Vertical Bar** into each set of **Cast Double Tube Sign Fittings** on the tent legs and secure with wing nuts.
3. Insert **Top Bar** through top pocket of your printed horizontal sign. Then attach a **Cast Bally Corner Fitting** onto each end of the **Top Bar**.
4. Insert the bottom of the **Cast Bally Corner Fittings** on the **Top Bar** (with sign) onto each of the **Vertical Bars**. Secure bottom of sign to **Vertical Bars**.

Vertical Sign Assembly

Part List

- 2 Cast Double Tube Sign Fittings
- 1 9'5" x 1-1/3/4" Vertical Bar
- 2 2' x 1-3/4" Aluminum welded Horizontal Bars

1. Install 2 **Cast Double Tube Sign Fittings** onto one of the front tent legs BEFORE assembling tent frame. Install just above the half way mark on the leg. Space the fittings about 4"-6" apart and tighten wing nuts to secure to tent leg.
2. Slide each 2' **Aluminum Horizontal Bars** onto the **Vertical Bar**. Tightly secure the top **Horizontal Bar** to the top of the **Vertical Bar**. Insert printed vertical sign onto the **Horizontal Bars** through top and bottom pockets of the sign. Adjust bottom **Horizontal Bar** on the **Vertical Bar** to make the sign taut. Securely tighten the bottom **Horizontal Bar** to the **Vertical Bar**.
3. Insert this assembled sign into the 2 **Cast Double Tube Sign Fittings** on the tent leg. Adjust to desired height and tighten wing nuts to secure.

